



Metcalfe HPC
Hand Operated Potato Chipping Machine

 
Operating & Cleaning Instructions



Contents

Introduction	3
Installation & Operation	4
Stands	4
Cleaning & Interchanging Block, Knives & Frame	5
Cutting Options	5
Maintenance	6
Troubleshooting	6
Warranty	7
Spare Parts & Service	7

Introduction

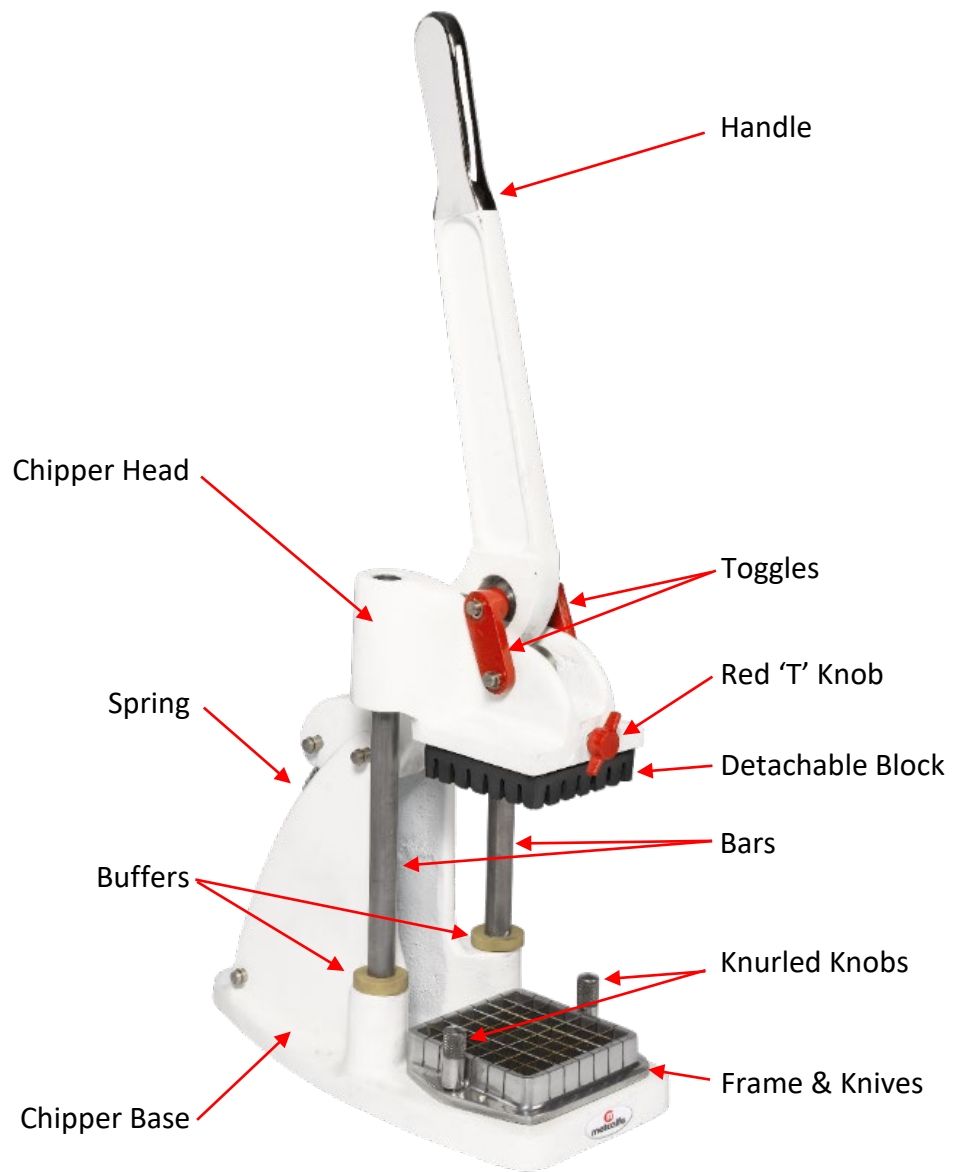

Installation & Operation

Your Metcalfe Hand Operated Potato Chipping Machine is designed to be used with peeled potatoes and will need to be secured before first use. This can be done in various ways:-

- 1) Drill 3 holes in the work surface to secure the chipper firmly in place
- 2) Use the table/bench mounting stand to eliminate the need to drill holes in the work surface
- 3) Use the floor mounting stand to give the correct operating height. It also has adequate space for a large receptacle to receive the chips

Table/Bench Mounting Stand



Floor Mounting Stand



Part No	Item
5HC07	Table/Bench Mounting Stand
5HC04	Floor Mounting Stand

Cleaning & Interchanging Block, Knives & Frame

Your chipper has a detachable upper block, making the cleaning and/or interchanging of the block, knives & frame an easy and hygienic task.

To remove the upper block, unscrew the red "T" knob at the front of the machine (anti-clockwise) and pull down the block.

To remove the knife frame, unscrew the two knurled knobs (anti-clockwise) and remove.

The block and knife frame can then be cleaned and/or interchanged.

To re-assemble the block onto the machine, please ensure that the hole on the top face of the block is positioned to the rear of the machine. Push the block up to locate on the lug underneath the head casting. Then tighten the red "T" knob (clockwise).

 
Fit the knife frame back onto the machine, ensuring that the lip on the frame is positioned to the front of the machine. Before tightening the knobs, lower the head onto the knife frame below to ensure they are aligned correctly, then screw both knurled knobs down tight (clockwise).

We recommend that the body of the machine be washed down using a soft cloth and hot soapy water. The upper block, frame and knives can be cleaned down using a brush to clear any remains of potato or starch.

Please Note: Do not put any part of this machine in a dishwasher.

Cutting Options

There are 5 different sets of block, frame & knives available i.e. to produce either 8mm ($\frac{5}{16}$ "), 10mm ($\frac{3}{8}$ "), 12.5mm ($\frac{1}{2}$ ") or 14mm (5.8") chips, and an 8-piece potato wedger.

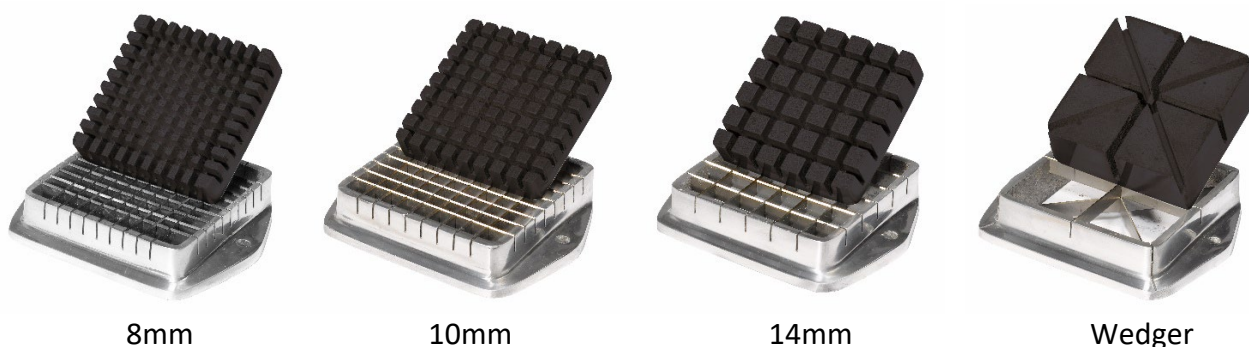

The 12.5mm is shown on the machine on the cover of this leaflet.

Part No	Item
9HC21	Set of block, knives and frame 8mm
9HC22	Set of block, knives and frame 10mm
9HC23	Set of block, knives and frame 12.5mm
9HC31	Set of block, knives and frame 14mm
9HC17	Set of block, knives and frame 8-piece wedger

 
Maintenance

To ensure your chipper maintains a smooth chipping motion, the bars of the chipper must be oiled with a food-safe, tasteless oil periodically. The oil should be applied to the top of the bars and the handle lowered and lifted several times to distribute the oil evenly. Any excess should be wiped away from the top of the bars.



Troubleshooting

If the block and frame are not aligning perfectly the frame position can be adjusted. To do this, loosen the knurled knobs by turning them anti-clockwise and adjust the position of the frame slightly. Lower the head onto the knife frame below to check the alignment is correct and once the alignment is perfect, tighten the knobs again (clockwise).

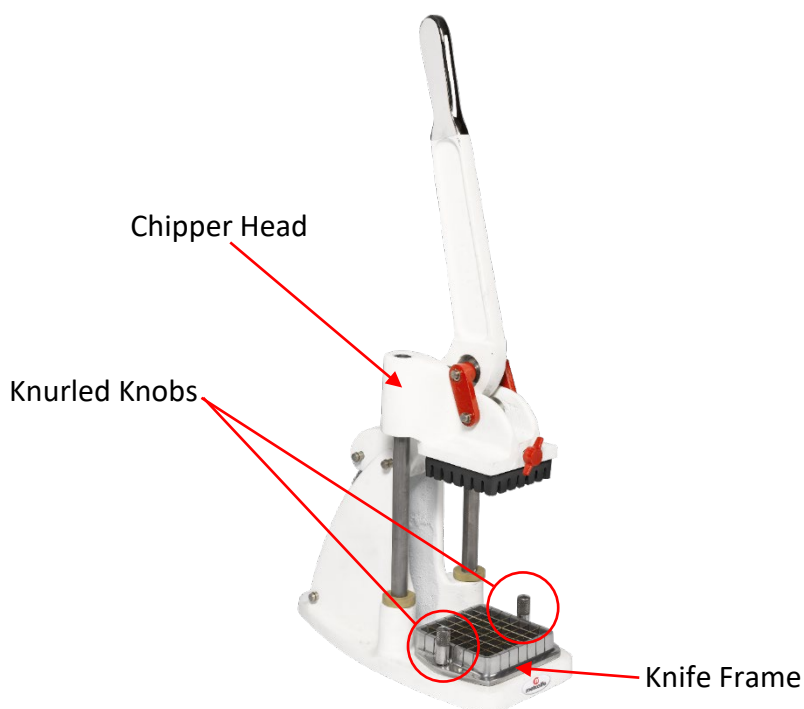

Warranty

All Metcalfe products are guaranteed against defects in material and workmanship for a period of one year from date of invoice, except where specifically noted.

The company's obligation under this warranty is limited to repairing or replacing without charge any part or parts found to be defective under normal use, in accordance to the specified operations manual and capacity ratings.

On all return to factory warranty items, it is the responsibility of the purchaser to return the entire unit to the factory, in a clean condition, properly packed and labelled.

All repairs, alterations or replacement of materials or parts not authorised by Metcalfe will automatically void all warranties in their entirety.

There is a limited 6-month warranty on the following:

- Parts purchased or supplied for the repair of Metcalfe equipment

This warranty does not cover the following:

- Failure due to incorrect installation
- Failure due to neglect, abuse, careless handling, or misuse of machine
- Failure caused due to improper maintenance
- General wear and tear

Metcalfe and its suppliers reserve the right to make changes in design and specification to any product without prior notification.

Spare Parts & Service

For more information on Metcalfe spare parts, accessories and service support, including breakdown drawing and parts list please contact us on the details below.

Please always quote the Serial Number of the machine. This can be found on the serial number plate which is located on the left-hand side of the machine's base.

Metcalfe Sales & Spares Department sales@metcalfecatering.com 01766 830 456

Metcalfe Service Department service@metcalfecatering.com 01766 203 126

 
Metcalfe Website www.metcalfecatering.com

Additional copies of this instruction manual can be obtained by either visiting our website or contacting the sales department.

9/2023

Metcalfe Catering Equipment Ltd

Haygarth Park
Blaenau Ffestiniog
Gwynedd, LL41 3PF

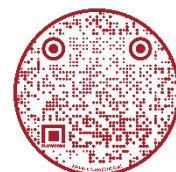

t 01766 830 456

e sales@metcalfecatering.com

w www.metcalfecatering.com